

# **ZR25MC and ZR30MC**

## **Displaying the Time Code**

Press the DATA CODE button on the wireless controller. When using a cassette, press it while the camcorder is in play.